



Print a cleaning page.

Steps


Step 1: Navigate to the control panel (right click start button)

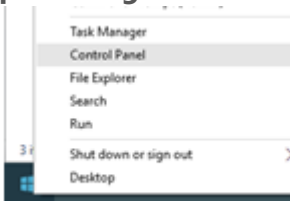

OR - Left click start button and type 'control panel' into start search box.

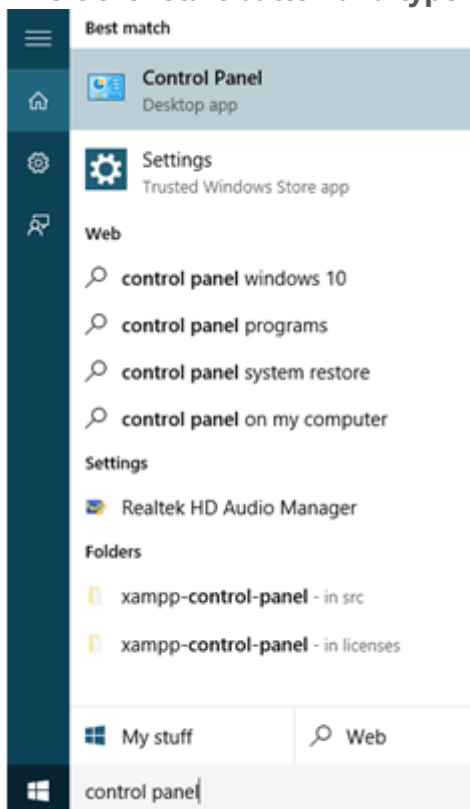


Step 2: Select Devices and Printers.

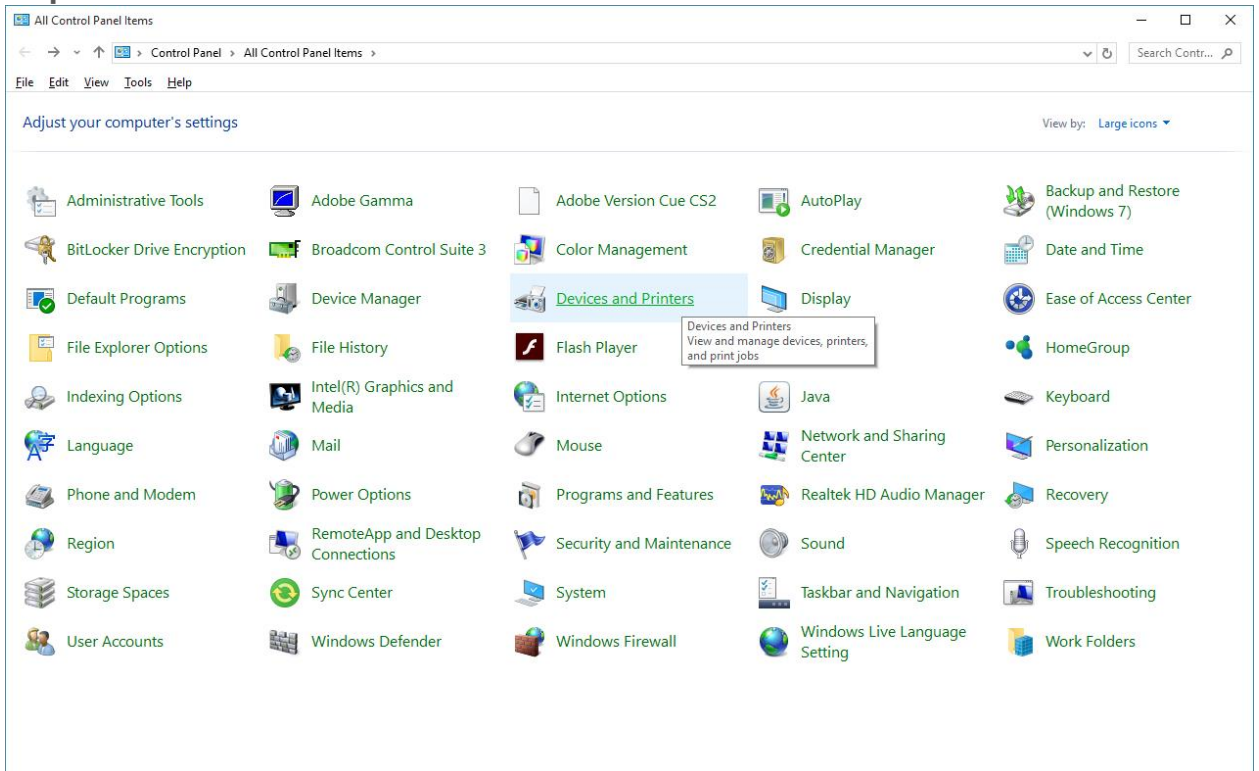


Step 3: Right click your printer and select 'Printer properties'.

Printers (16)

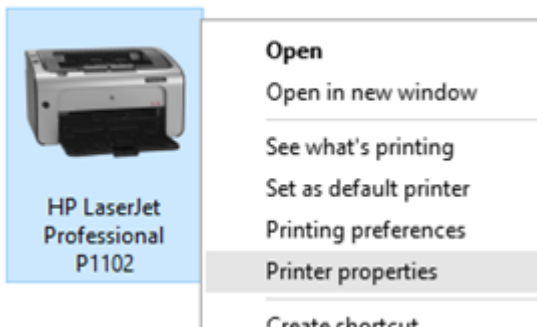

Step 4: Select 'Device Settings tab'.

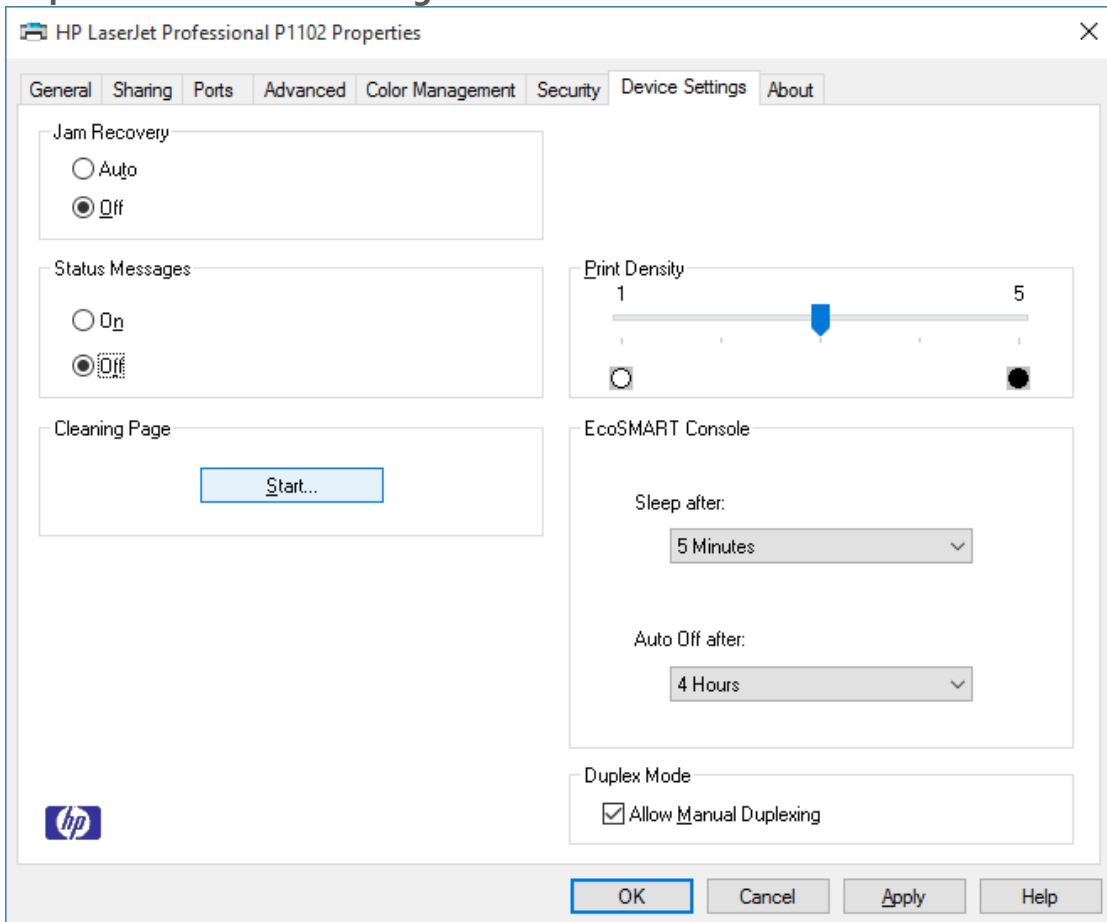

Step 5: Load printer with A4 paper and click 'Start' in the Cleaning Page section and follow instructions.

